


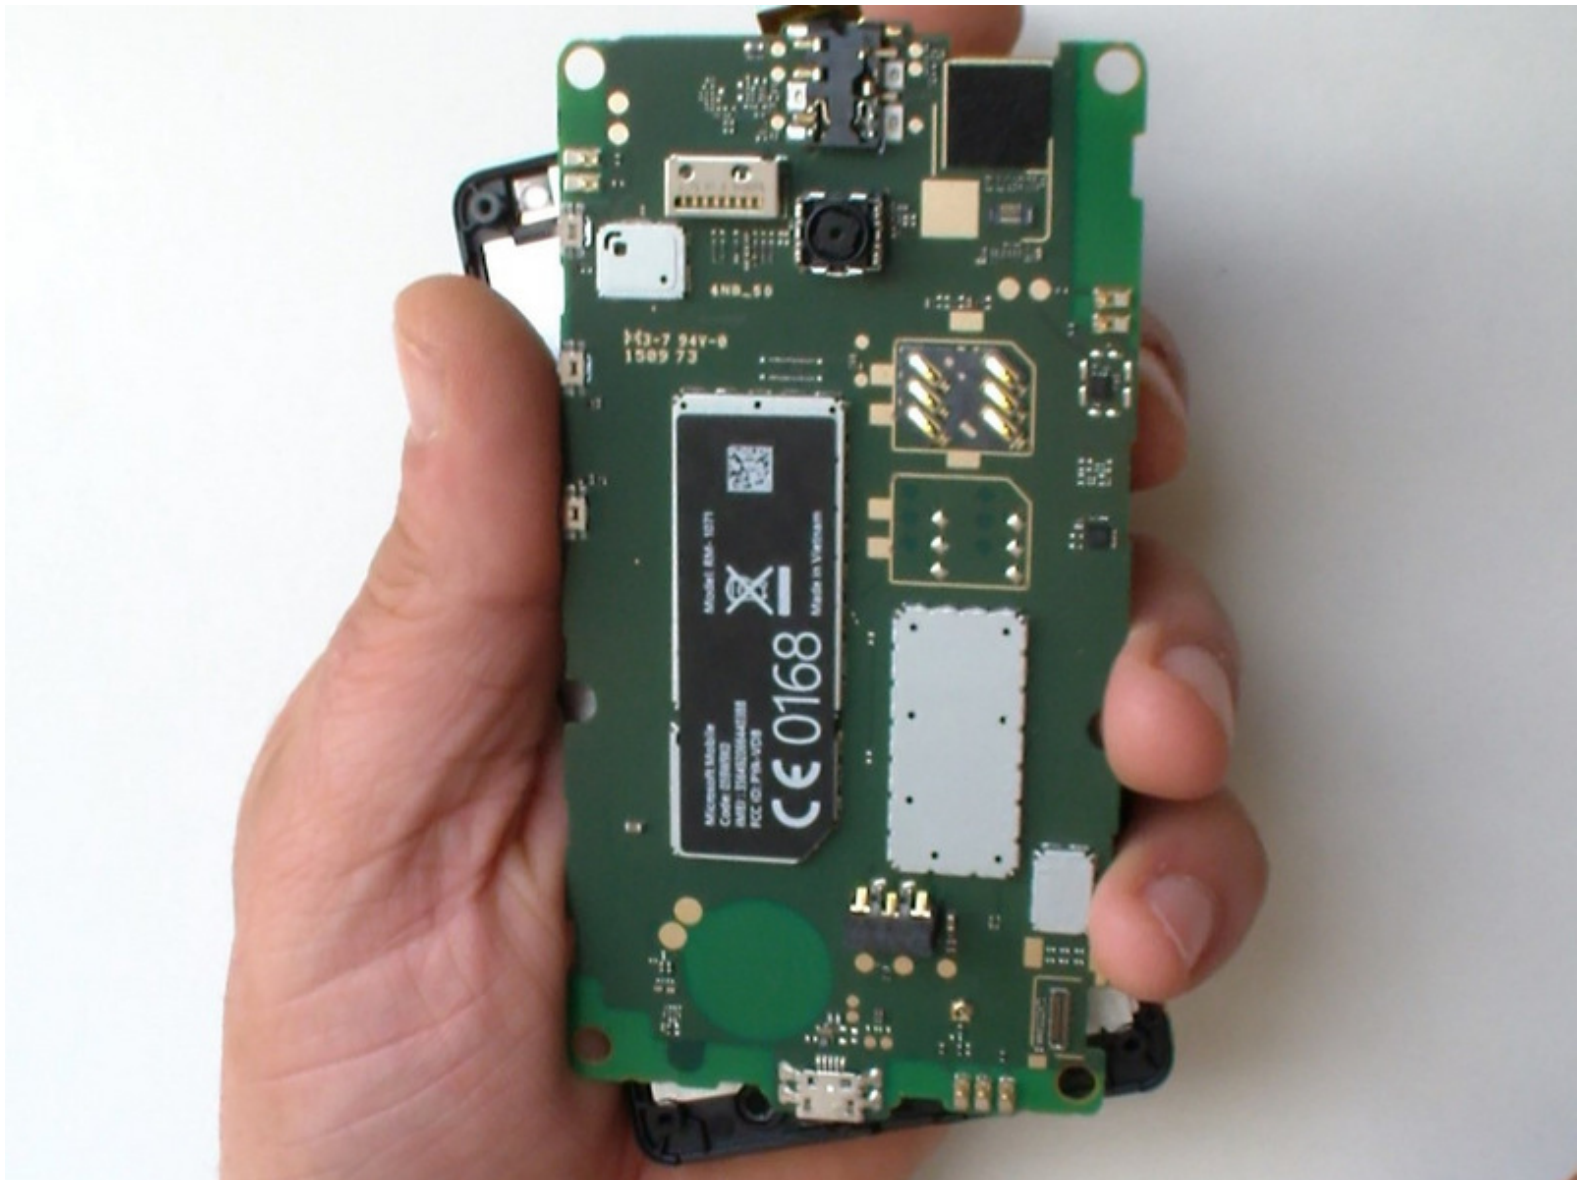

Microsoft Lumia 435 Logic board Replacement

Microsoft Lumia 435 Logic board Replacement

Written By: ZFix



INTRODUCTION

How to disassemble Microsoft Lumia 435 and remove / replace the logic board.



[video: <https://www.youtube.com/watch?v=clB1BsoeggQ>]



TOOLS:




- [iFixit Opening Picks set of 6](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover

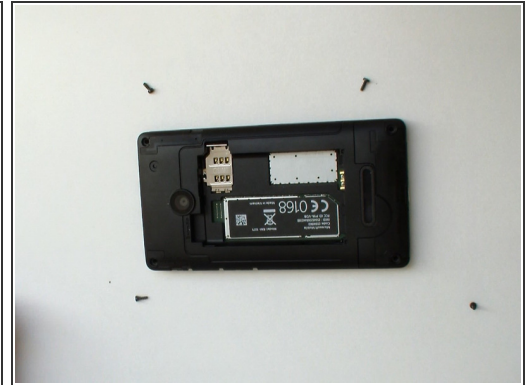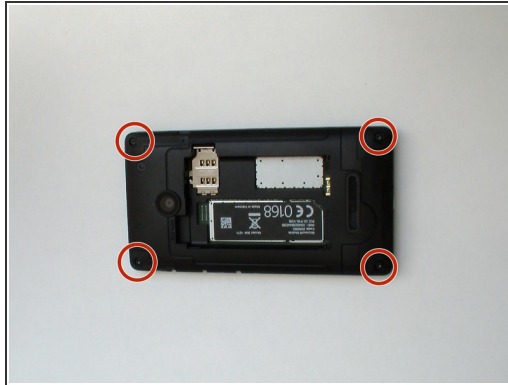




- Switch off the phone.
- Remove the battery and any inserted SIM and memory cards.
- Use a screwdriver Torx T6 and remove the 4x black screws.

Step 2

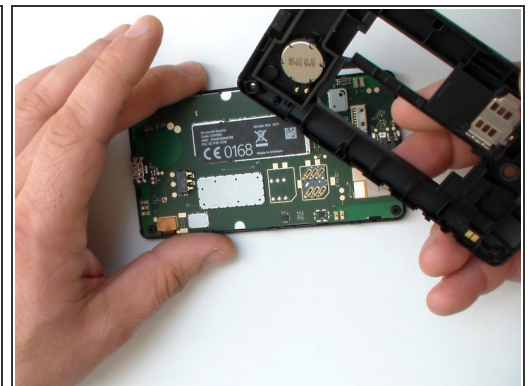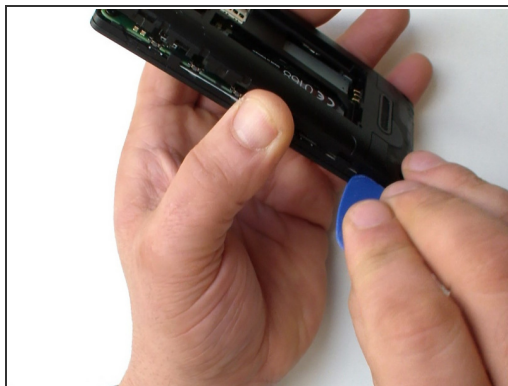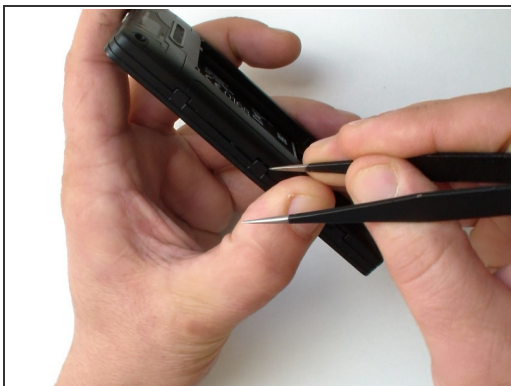


- There are several plastic locking clips hold the back cover to the frame.
- Use a tool with a sharp edge to unlock them and a plastic tool to separate the back cover.

Step 3 — Logic board

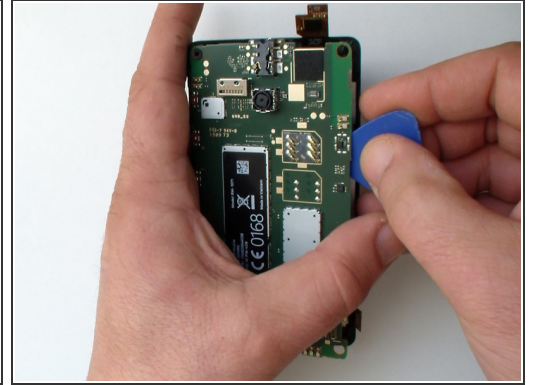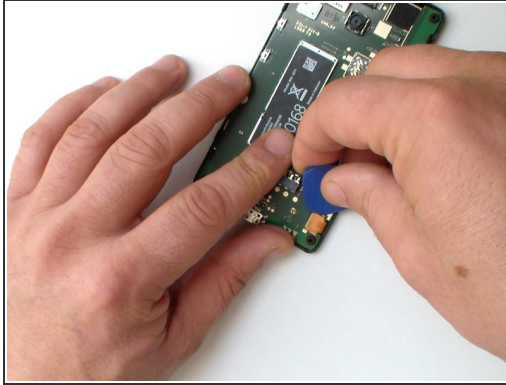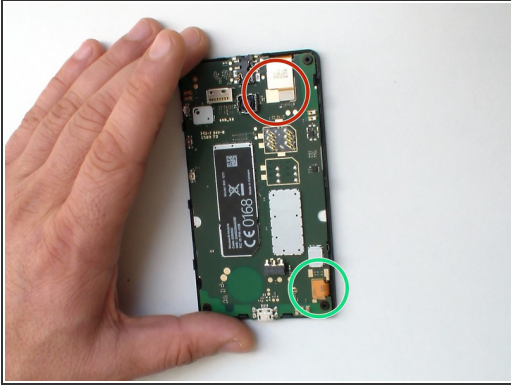

- Unhook:
 - the touch screen flex cable
 - the LCD Display flex cable
- Use a plastic tool lift up and remove the Logic board.

Step 4

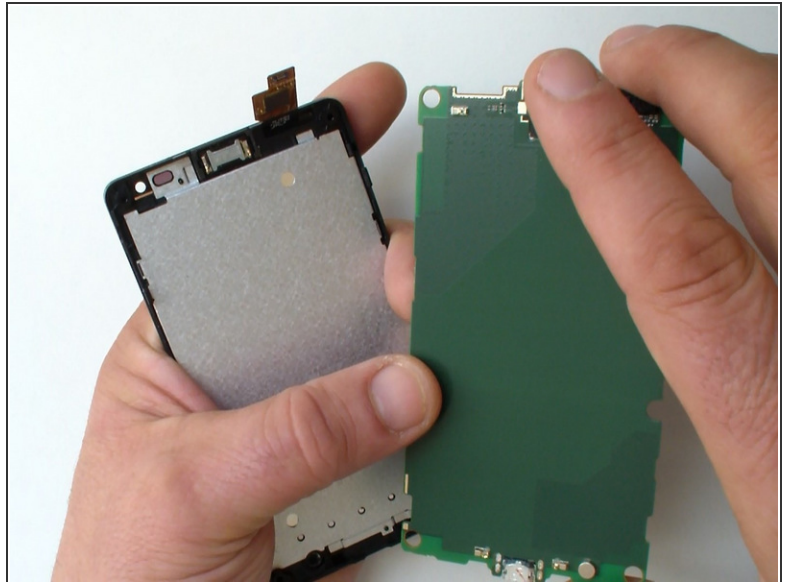

- This is the logic board / main board - a front and rear view.

To reassemble your device, follow these instructions in reverse order.

